



Turbofan E31

Technical Data

Power

- 10 AMP

Dimensions

- 1410 mm high (Double Stack)
- 730 mm deep
- 950 mm wide

Weight

- approx. 50 kg per single

Capacity

- 4 x 65mm GN trays

Special Feature

- 3 wire racks



How to operate:

Connect Power

Turn Power On – power switch illuminates when it is depressed and latched on in the down position.

Set thermostat to desired position. The heating indicator light will illuminate whenever the elements are cycling on to maintain the set temperature.

Load Oven – once at temperature.

Note – the oven's fan will switch off and the light will illuminate when door is opened.

BAKING

Set bake timer to desired time. To set timer, turn knob clockwise to the required time. At any stage, the time can be adjusted in either direction. For settings less than 10 minutes, first set to greater setting, then turn down to the required time period.

Time Up – when the timer reaches 0 minutes the buzzer sounds and indicator illuminates. To cancel the buzzer, turn the timer to the off position.

ROASTING

Set Roast timer to desired time. This 3 hour timer is electrically drive and is set by turning the timer knob in either direction to the required time. The timer can be set when convenient, but will not start working until the oven control is set and Roast'n Hold switch is depressed (switch illuminated).

Depress roast switch. The switch will illuminate and the timer will begin to count down.

When the timer reaches the hold position, the main oven thermostat is turned off and a pre-set hold thermostat located behind the control panel will control the oven to keep food warm at serving temperature as long as required until the Roast button is turned off.

LIGHT – to view the product when baking or roasting, depress the light switch on the control panel. The light will stay on whilst the switch is latched in the down position.

GRILLING/BROILING

Turn thermostat fully clockwise until the GRILL/BROIL position is reached. The GRILL/BROIL indicator will illuminate indicating the GRILL/BROIL function has been set. The heating indicator will also illuminate whenever the element is on.

It is recommended that the GRILL/BROIL mode is only used with the oven door open as the oven fan is then automatically off. If however the GRILL/BROIL mode is used with the door closed, the elements will cycle on/off when oven temperature rises above 300 degrees C to prevent damage to the oven.

Load oven – place an oven rack normally on the top position. When the element has reached bright red (5 minutes), position the dish under the GRILL/BROIL element. Heat food on one side, then turn to the other side.

Set bake timer to desired time as above baking instructions.



Time Up – when the timer reaches 0 minutes the buzzer sounds and indicator illuminates. To cancel the buzzer turn the timer to the off position.

Cleaning instructions

Wipe the outside with Damp Soapy Soft Cloth **ONLY**
Scrub inside

MAK will clean wire racks
Return to hired condition

Troubleshooting

Ensure connected to power

When connected to power make sure to switch on at the back of the above power source

If the oven does not heat ensure the hold roast button is not activated.

Use buttons correctly

Press start button

Note – some machines the light stays on and others do not.